

# LM网关mosaic远程手机控制设置步骤

会思考的房子铸就无比舒适的智能家居生活 Intelligent & comfort home with thinking

• 智能,精致,舒适intelligent meets elegance and comfort



LM远程手机设置方法

#### 进入下图所示+



# 选择LogicMachine Cloud(NEW)后面+添加到初始页面(如图2)



embedded ©systems







图5

Existing net	vorks		
No networ	is found, create a network	below	
Create new	network		
Enter network	name		Create
Enable Mo	saic for multiple netwo	orks	
Change pas	sword		
Current passwo	rd		
New password			
Repeat new pas	ssword		
Password must contain at least	contain at least one upper 8 characters	case letter, lowercase	letter and a digit. It must
Logout 4137423	47@qq.com		Change password

点击Create,会出现一个Existing networks ID和 连接云的连接字符串,如图6

LM远程手机设置方法

LogicMachine Cloud

LogicMact	nine Cloud	×
	on string into LM Cloud application	
eyJ1c2VybmFtZSI8	jQxMzc0MjM0N0BxcS5jb20iLCJuZXR3b3JrljoiMjQ2f	8
Existing networks		
ID: 2467506236 offline		Actions -
Create new networ	k	
Enter network name		Create
Enable Mosaic for	multiple networks	
Change password		
Current password		
New password		
Repeat new password		
Password must contain a contain at least 8 charac	at least one uppercase letter, lowercase letter and a d ters	git. It must
Logout 413742347@qq./	Chang	e password





LM远程手机设置方法

复制字符串返回LogicMachine Cloud, 把复制过来的字符串粘贴到图7处

图7

点击Save changes保存,LM云就会 显示连接OK,如图8



embedded Osystems

LM远程手机设置方法

## 返回mosaic界面图2,点击就会看到手机远程APP设置成功,见图13



图1





### 安卓手机登录



embedded Systems



